

## **Denon CD/DAB Radio**

Using the hand set

Red Button ON/OFF

Press SOURCE to select either Tuner or Disc

### **Tuner**

**Press SOURCE to select Tuner**

Pre set stations:

1 BBC Radio 1

2 BBC Radio 2

3 BBC Radio 3

4 BBC Radio 4

5 Classic

**Please** do not change the pre-set stations 1-5

To find other DAB stations press TU-/ + to scroll through other stations available.

NOTE: DAB reception is intermittent in this area. It seems to work best on cloudy days! If you get poor reception please do not re-tune the pre-set stations; it will not improve the sound quality.

### **Disc**

**Press SOURCE to select Disc**

To open CD tray press open button on CD player (button to right of disc tray)

Place one disc only in tray

Close tray using the button. Do not push tray in – use the button

To play press the CD button on the handset or the button to the right of the open/close button on the CD player.