


Operating the Dishwasher

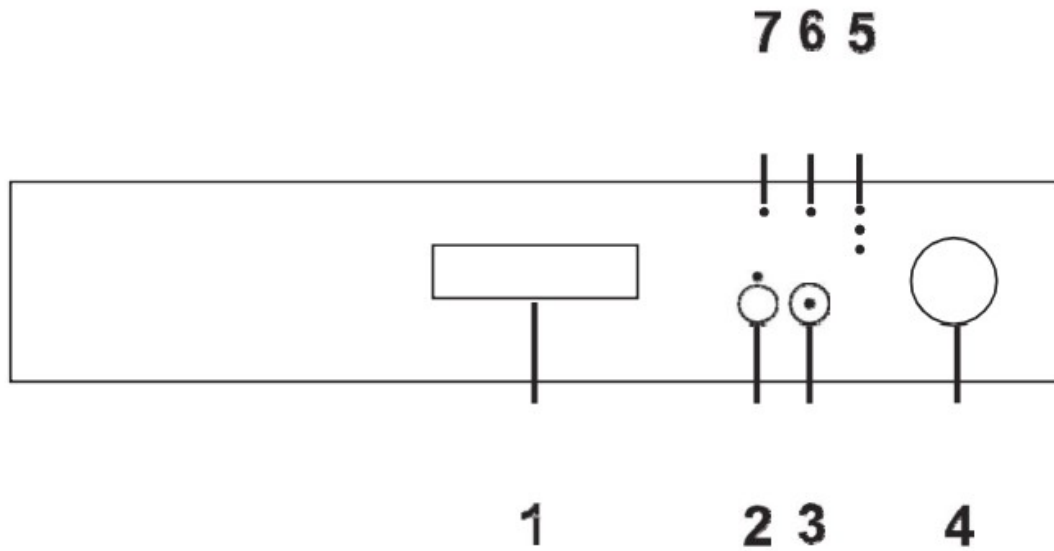

1. Door Handle

The Dishwasher is simple to use.

Use r/h knob (4) to select the washing cycle you want (see below).

Button 3 will light up – press it – the cycle will start.

1. **Door Handle** Use the door handle to open/close the door of your machine.

2. **Delay** Upon pressing the delay key 3h washing light will be lit. If you keep on pressing the Delay key, 6h-9h lights will be lit respectively on your each press. You will cancel the delay if you press the delay key again after the 9h light is lit. To activate the delaying function, select the delay time and then press the Start/ Pause key.

2. **Half Load Button** The half load function will be activated and the half load LED will be lit if the key number 2 is pressed and held for 3 seconds. Press the key number 2 for 3 seconds to cancel the half load function.

3. **Start/Pause Key** When you press the Start/ Pause key, the programme you have selected with the programme selection button will start operating and the washing light will be lit. You can press Start/ Pause key if you would like to stop the programme. In such case, the light on the Start/ Pause key will blink. You can allow the programme to resume by pressing the Start/ Pause key again.

4. **On/Off Programme Selection Button** When in off position, it cuts off the energy of the machine. In other positions, the machine is energised and programme selection can be performed.

- At 12 o'clock – On / OFF then moving round clockwise
- Prewash
- Quick wash
- Eco
- Super
- Intensive
- Hygiene (please use this setting when you leave the cottage)

5. **Programme Monitoring Lights** Show you stage at which cycle has reached:

- Wash
- Dry
- End Programme

Full instruction manual can be found at <https://tinyurl.com/4n5p2sc>